


AMERICAN HYDROTECH, INC.



GARDEN ROOF ASSEMBLY

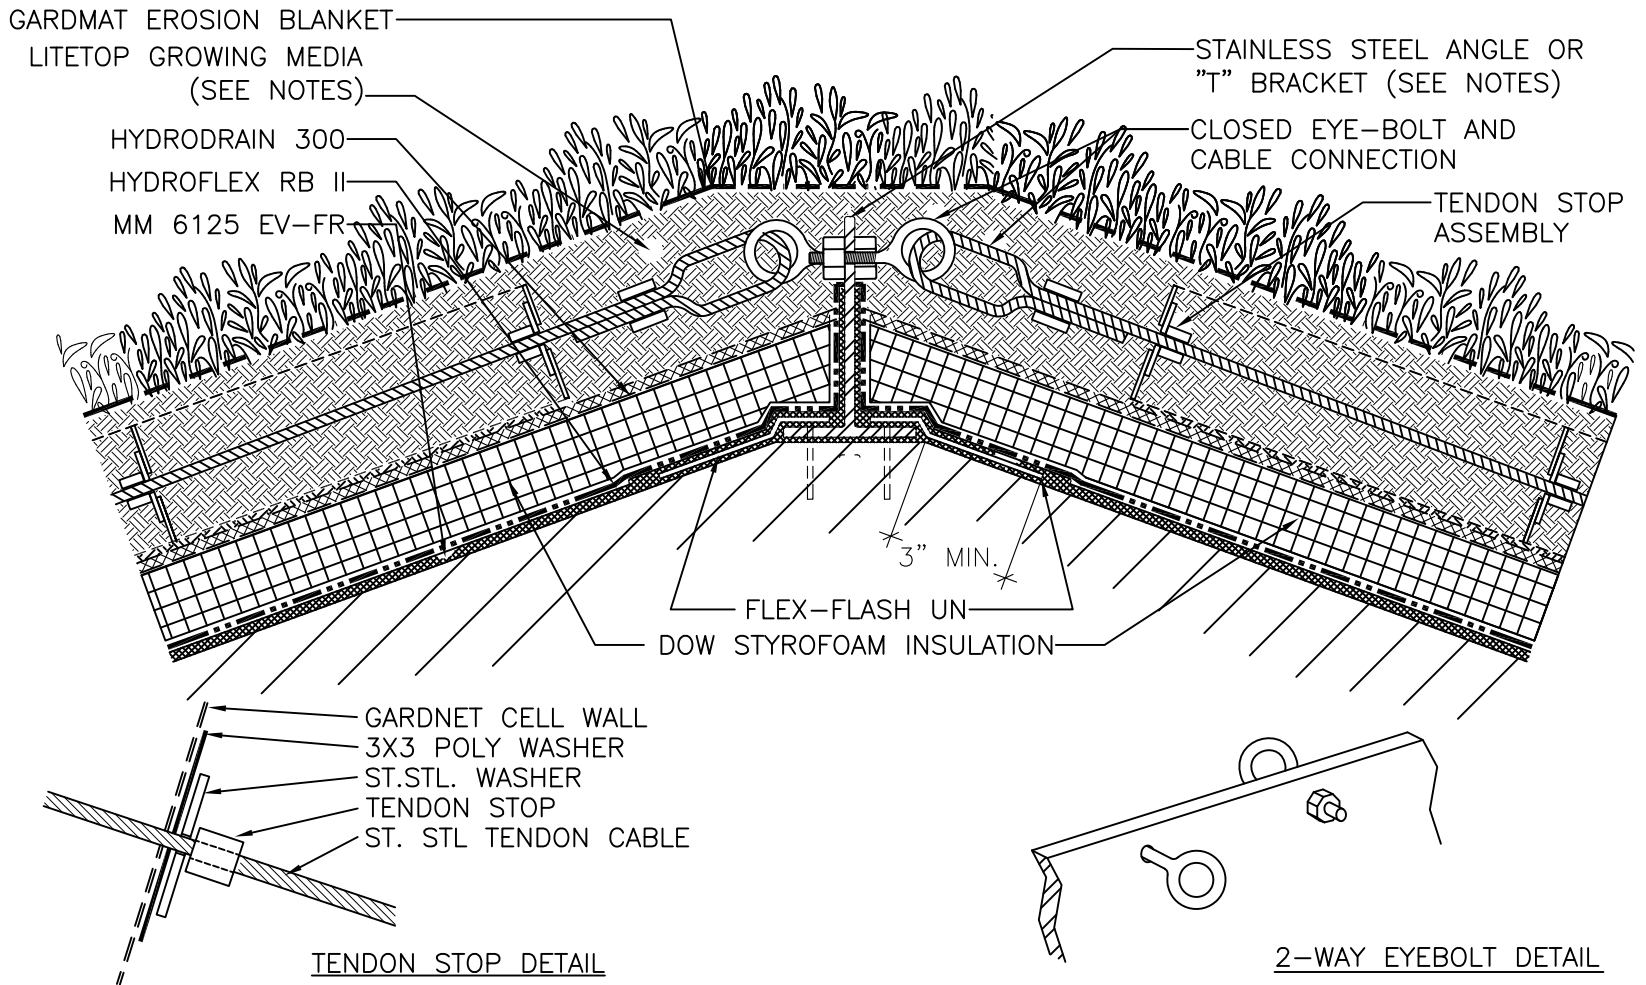

NOTES:

- IF DOW STYROFOAM INSULATION IS NOT INSTALLED, HYDRODRAIN 302 SHALL BE PLACED ON TOP OF THE HYDROFLEX RB II.
- THE NUMBER OF STOPS AND THE SIZE, NUMBER, SPACING AND LENGTH OF REQUIRED TENDONS IS DETERMINED BY MEDIA DEPTH AND DEGREE AND LENGTH OF SLOPE.
- TOP OF SLOPE ATTACHMENT PULL-OUT STRENGTH AND METHOD OF ATTACHMENT MUST BE DETERMINED, DESIGNED AND VERIFIED BY PROJECT ENGINEER.
- LITETOP GROWING MEDIA MUST BE USED IN ALL GARDNET INSTALLATIONS. SUBSTITUTIONS ARE NOT ALLOWED.

TYPICAL TOP OF SLOPE GARDNET CONNECTION AT RIDGE (WITH DOW INSULATION)

NO SCALE

GN-5C