


AMERICAN HYDROTECH, INC.



GARDEN ROOF ASSEMBLY

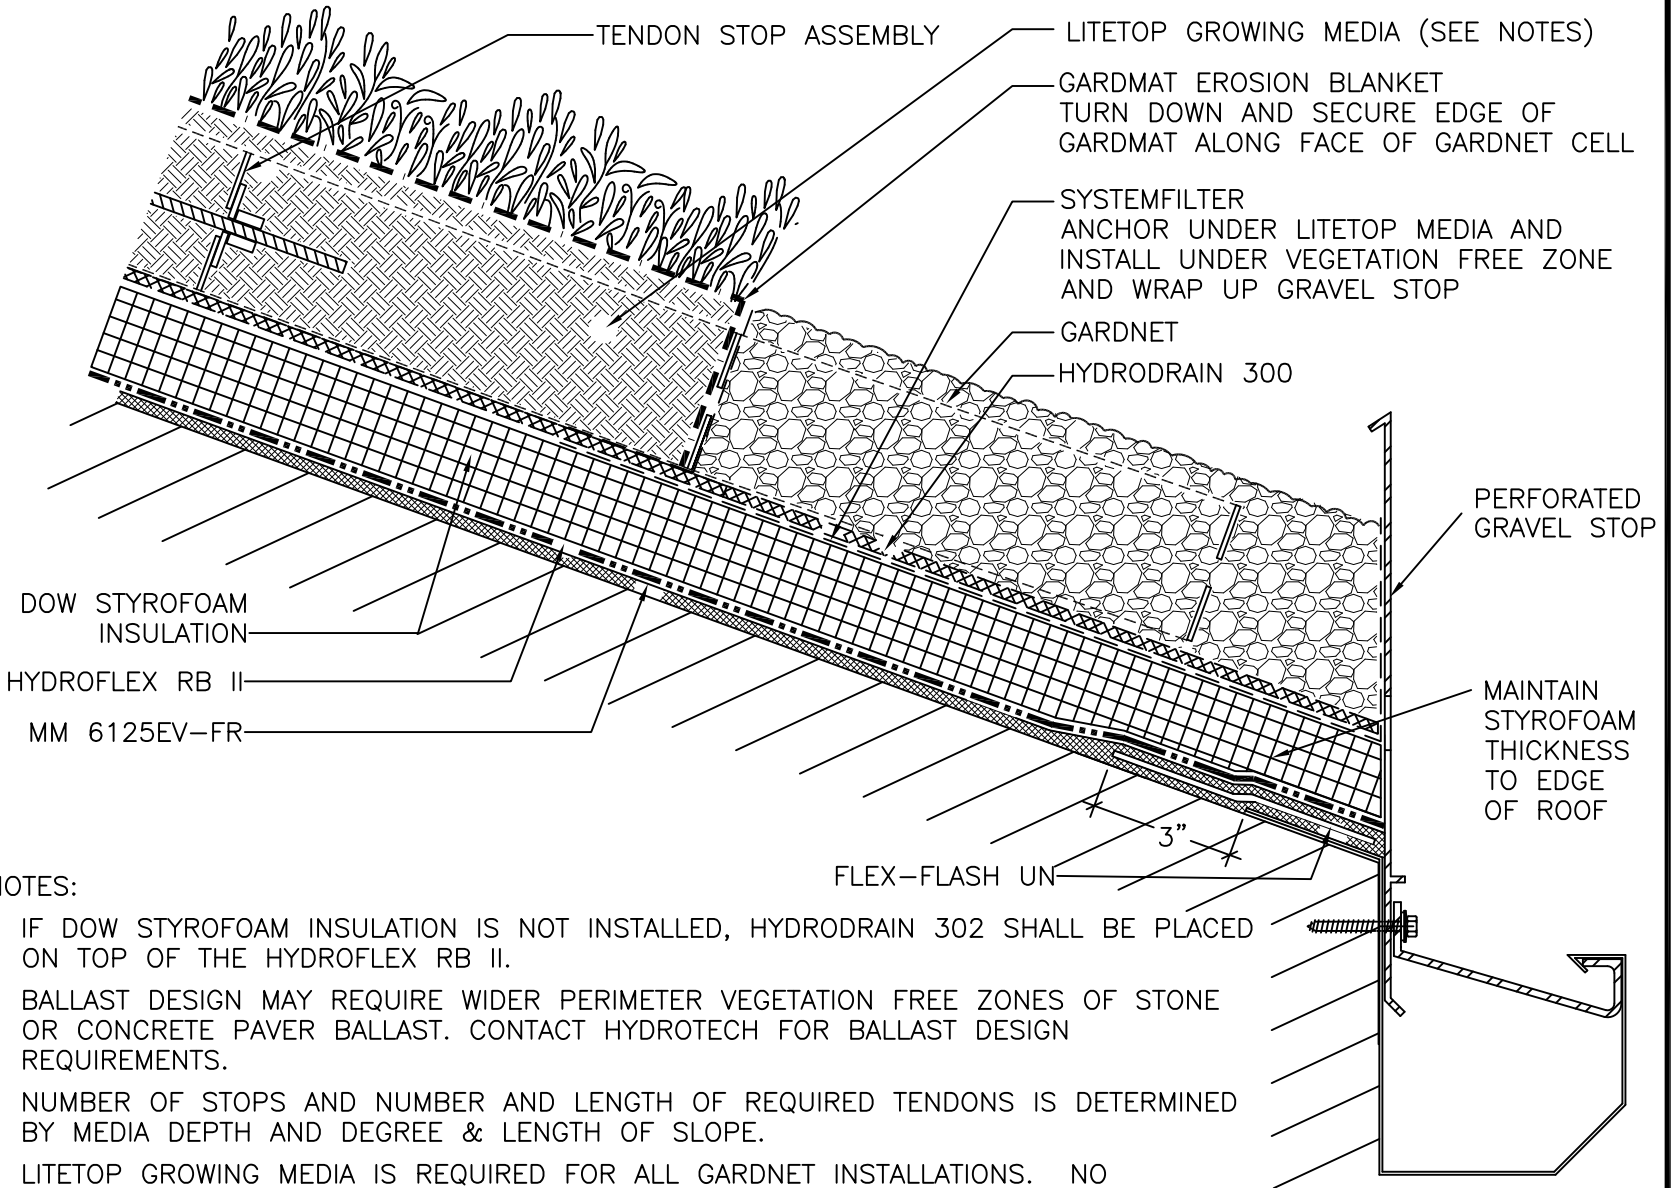

NOTES:

- IF DOW STYROFOAM INSULATION IS NOT INSTALLED, HYDRODRAIN 302 SHALL BE PLACED ON TOP OF THE HYDROFLEX RB II.
- BALLAST DESIGN MAY REQUIRE WIDER PERIMETER VEGETATION FREE ZONES OF STONE OR CONCRETE PAVER BALLAST. CONTACT HYDROTECH FOR BALLAST DESIGN REQUIREMENTS.
- NUMBER OF STOPS AND NUMBER AND LENGTH OF REQUIRED TENDONS IS DETERMINED BY MEDIA DEPTH AND DEGREE & LENGTH OF SLOPE.
- LITETOP GROWING MEDIA IS REQUIRED FOR ALL GARDNET INSTALLATIONS. NO SUBSTITUTIONS ARE ALLOWED.
- UPPER LAYER OF GARDNET CELLS MUST BE OVERFILLED WITH LITETOP GROWING MEDIA BY 1/2"-1".
- GARDMAT EROSION MAT SHALL BE INSTALLED WHEN PLANTING PLUGS. NO GARDMAT IS REQUIRED WHEN INSTALLING INSTAGREEN SEDUM CARPET OR TILE.

TYPICAL BOTTOM OF SLOPE GARDNET TERMINATION AT GRAVEL STOP (WITH DOW INSULATION)

NO SCALE

GN-6A